

# SERVICE INSTRUCTIONS

## A60 SLIDINGDOORS

1. The doors must be installed in a way that doors slides in a smooth and gentle way, without stopping against stops to hard.
2. Service of the slidingdevice.  
Slidingrail and wheels must be oiled with grease (interval depending on the opening sequence).
3. Wire and breakwheel must be kept in grease.
4. Lockcase oiled from time to time.
5. Aircylinder and nipples kept free from moisture.

Alvedoor Service department.